


How to Use the Voice-Control Sailboat Device

1) Place microphone on or near to the body

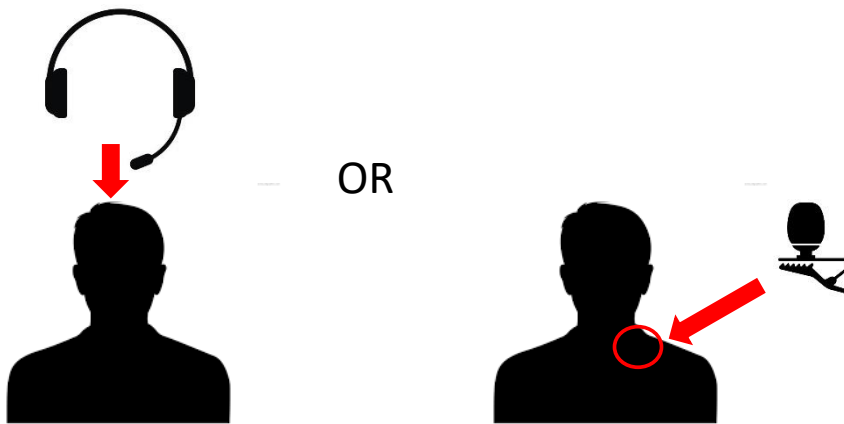

2) Choose one of the five available commands:


“Left”, “Right”, “In”, “Out”, or “Center”

3) **“Left”** will turn the boat left. **“Right”** will turn the boat right. Each additional “left” or “right” command will further increase the boat’s rate of turn.

“In” will move the sails inward. **“Out”** will move the sails outward. Each additional “In” or “Out” command will further turn the sails.

“Center” will return the rudder to a zero-turn state allowing the boat to move in a straight line.

Note: These commands can be customized during the setup portion shown in the “Setup Guide” to fit the needs of each individual user

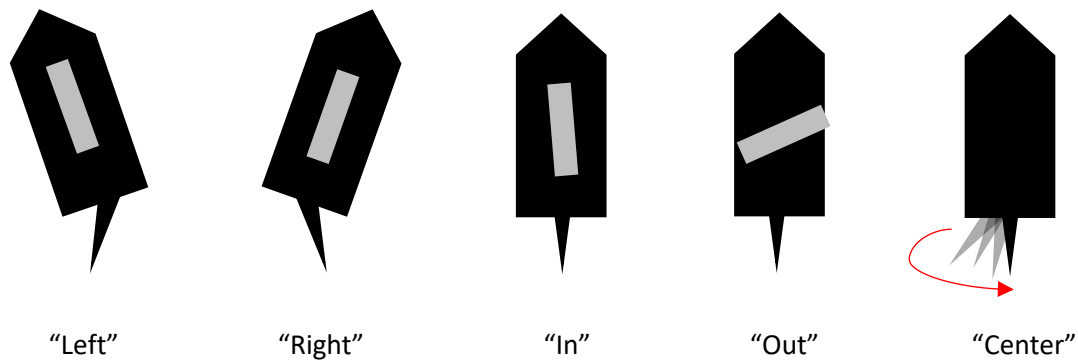

3) Speak the chosen command clearly and directly into the microphone.

Note: Multiple commands can be chained together in quick succession, although this may decrease the device's accuracy.

4) Observe the rudder or sail movement corresponding to the command that was spoken.

5) Re-configure commands in the provided user interface if a command produces multiple incorrect movements. Refer to the setup guide for re-configuring the commands. Ensure microphone is fully connected to the device before re-trying spoken commands. If necessary, try "training" your voice to a different group number.